LABEL REPLACEMENT FOR VA3000 SERIES DATASCAN RESET KEY

INSTALLATION PROCEDURE

NOTE:

This procedure applies to VA3000 series monitors with software version 1.06 and later, and provides instructions for installing an AUTOSET label over the existing Datascan Reset key.

1. Locate the DATASCAN RESET key on the right side of the front bezel.

NOTE:

In order to properly secure the new label to the key, the surface of the key must be carefully sanded. Use 120 grit sandpaper or similar grit emory board.

2. Mask off the area surrounding the DATASCAN RESET key with tape.

3. Gently sand the surface of the key until the lettering disappears. At this point the surface should be coarse with a chalky residue. Wipe the residue from the key with an alcohol soaked cloth and examine the surface.

   If necessary, continue sanding until the surface is uniformly coarse. Wipe all residue from the surface of the key.

4. Remove the protective backing from the AUTOSET label; carefully center the label over the key and press the label into place. Wipe the surface of the new label clean and verify that it is secure.

5. Power up the monitor and verify that software version number 1.06 or later appears on the Power-up Diagnostics Screen.

6. Verify the function of the AUTOSET key by depressing the key. The alarm limits shall reset to the wide or narrow settings, as selected in the Autoset Control screen (accessible via the System Config screen).

INSTALLATION PROCEDURE (continued)

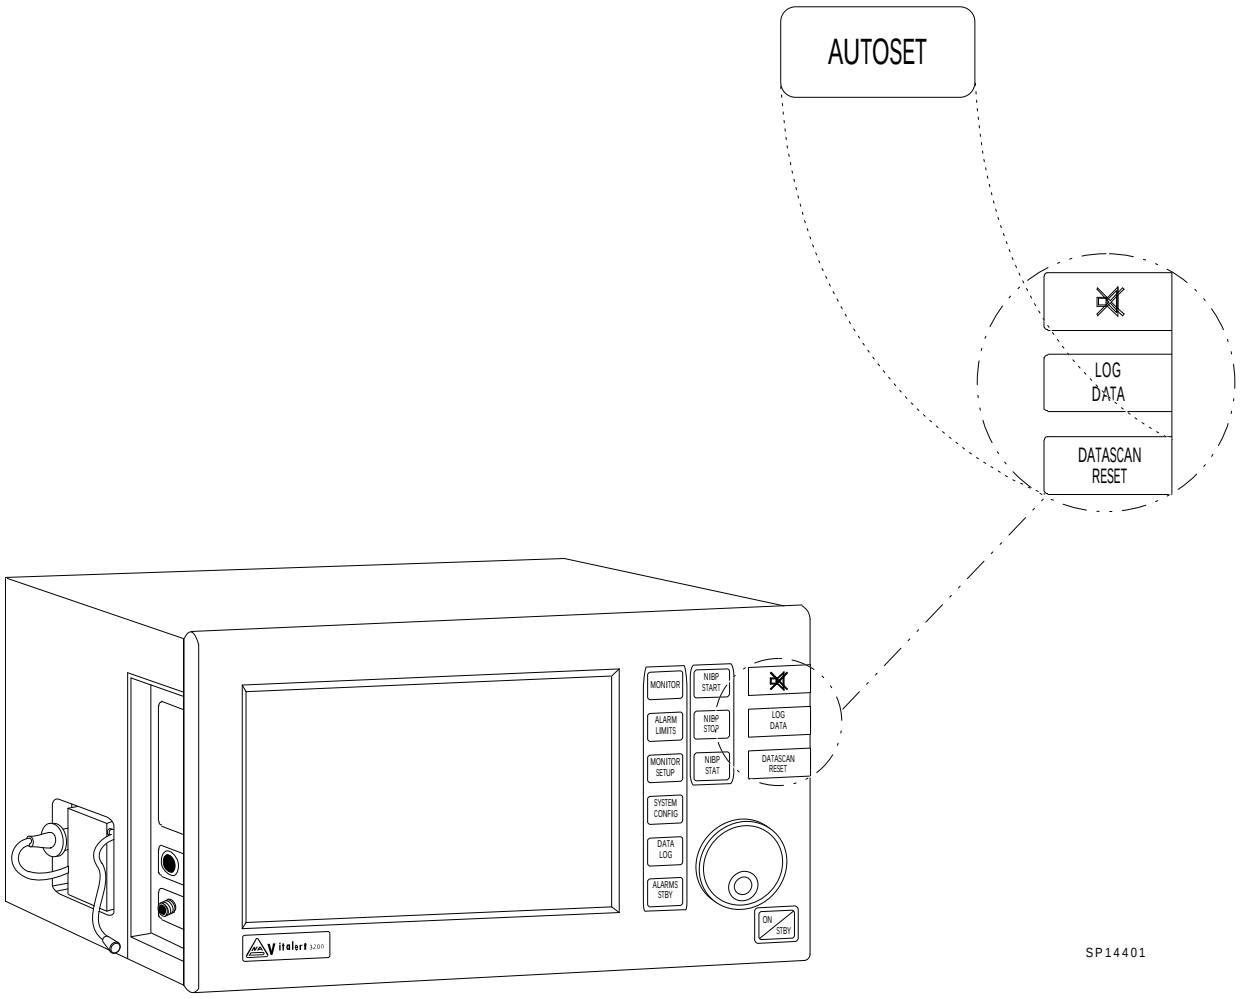

Figure 1: LOCATION OF AUTOSET KEY

NORTH
AMERICAN
DRÄGER

Quality Service for Life®

Technical Service Department
3122 Commerce Drive
Telford, PA 18969
(215) 721-5402
(800) 543-5047
(215) 723-5935 Fax

Part Number: SP00144
Rev: -
Date: August 25, 1994
© N.A.D. Inc. 1994